



QDP-KT Series

Fixture Kit




| Connections | MR16 bi-pin base |
|-------------------|----------------------------------------------------------------------------------------------|
| Fast Jack | ø6mm stem with threaded hub assembly |
| Wire | Braided co-axial, cable with stranded core, unsheathed |
| Wire Lengths | 7ft - 20ft |
| Multiple finishes | Satin Nickel, Antique brass, Brass, Bronze, Polished Nickel, Gun Metal, Black Satin |



Fixture Kit Includes: FJ fixture connector ASM-plated, Adapter plate holder w/coax cable-plated, & Allen wrench and extra screws.

| Model # | Wire Length | Cable (guage) | *Colors Available |
|---------|-------------|---------------|-----------------------------------------------------------------------------------------------------------------------|
| QDP*-KT | 85" | 18 GA | (SN)Satin Nickel, (AB)Antique Brass, (BR)Brass, (BZ)Bronze, (PN)Polished Nickel, (GM)Gun Metal, (BS)Black Satin |

MODEL SPECIFICATIONS

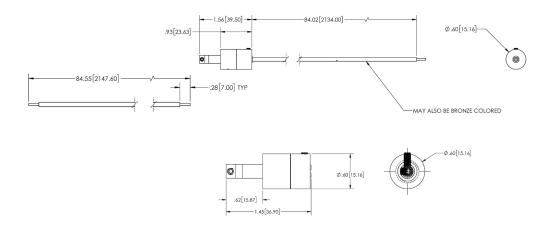





QDP-KT Series Fixture Kit

INSTRUCTIONS

- 1. TRIM CABLE END TO REMOVE BUMPS AND LOOSE ENDS.
- 2. LEAVE CABLE RELIEF IN CONNECTOR.
- 3. REMOVE THE SHORT SET SCREW FROM CONNECTOR AND LOOSEN THE OTHER.
- 4. INSERT CABLE TRIMMED END INTO CONNECTOR, PUSH UNTIL THE INNER WIRE IS SHOWING IN HOLE 'A'.
- 5. RE-INSERT SHORT SET SCREW WITH ALLEN WRENCH AND TIGHTEN.
- 6. INSERT THE LONG SET SCREW, TIGHTEN, DO NOT OVERTIGHTEN.
- 7. TEST CONNECTOR FOR SHORTS, REPEAT IF ANY ARE SHORTED.

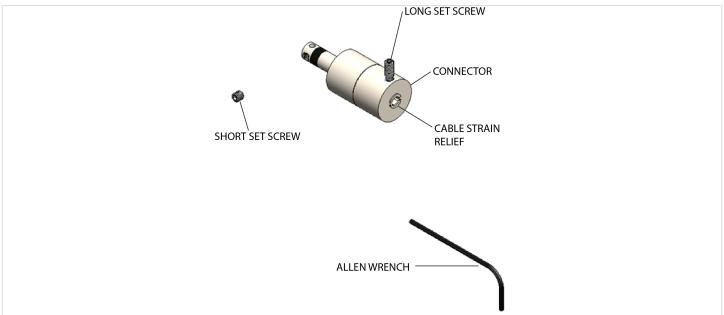

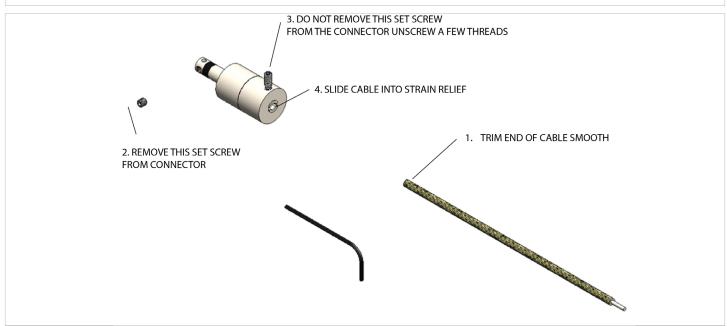





QDP-KT Series Fixture Kit

